



enercare®
Experts at home™

Tankless Reverse Osmosis System Filter Replacement

-  #1 Pre-Filter (Black)
-  #2 Carbon Filter (Dark Grey)


THIS PACKAGE CONTAINS YOUR PRE-FILTER AND CARBON FILTER FOR YOUR TANKLESS REVERSE OSMOSIS SYSTEM. PLEASE FOLLOW THE STEPS BELOW TO REPLACE YOUR FILTERS.
(THE REVERSE OSMOSIS FILTER IS REPLACED EVERY 3 YEARS AND WILL ARRIVE AT A LATER DATE.)

Stage 1: Filter Replacement Set Up

NOTE: Start by clearing the area around your Reverse Osmosis System under the sink and ensure you have enough room to access the filters through the magnetic top cover of your system.


1

Close the main shut-off valve on the cold water supply line connected to the Tankless Reverse Osmosis System by turning it clockwise.

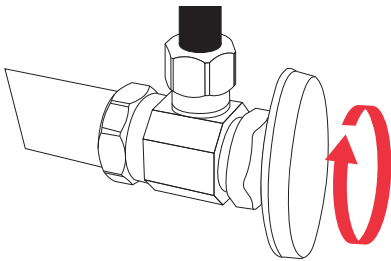


2

Open the faucet on the countertop to release all pressure to the Tankless Reverse Osmosis System, and leave the faucet open until you have replaced the required filters.

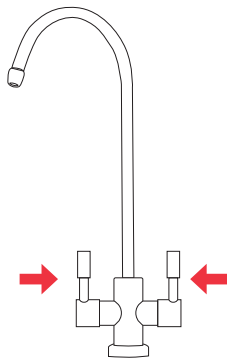

3

Press down on the magnetic top of the Tankless Reverse Osmosis System to remove the magnetic covering and reveal the filters. Place the cover with the screen facing up to not damage the cover.

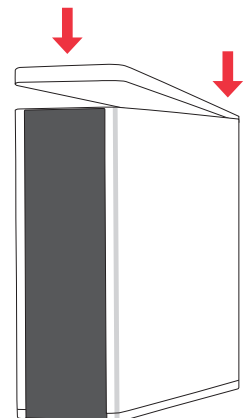

For more information please scan the QR code or visit **enercare.ca/tanklessfilters**



enercare[®]
Experts at home™


Tankless Reverse Osmosis System Filter Replacement

-  #1 Pre-Filter (Black)
-  #2 Carbon Filter (Dark Grey)

THIS PACKAGE CONTAINS YOUR PRE-FILTER AND CARBON FILTER FOR YOUR TANKLESS REVERSE OSMOSIS SYSTEM. PLEASE FOLLOW THE STEPS BELOW TO REPLACE YOUR FILTERS.
(THE REVERSE OSMOSIS FILTER IS REPLACED EVERY 3 YEARS AND WILL ARRIVE AT A LATER DATE.)


Stage 2: Replacing Filters #1 Pre-Filter and #2 Carbon Filter

NOTE: Your Pre-Filter and Carbon Filter will arrive in an encasing that is designed to make the filter change process as simple as possible.

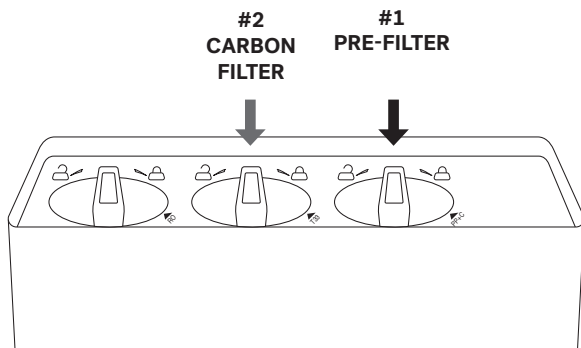


1

Grab the Pre-Filter by the handle and turn the filter counter-clockwise until the arrow points to the unlocked symbol and pops out.

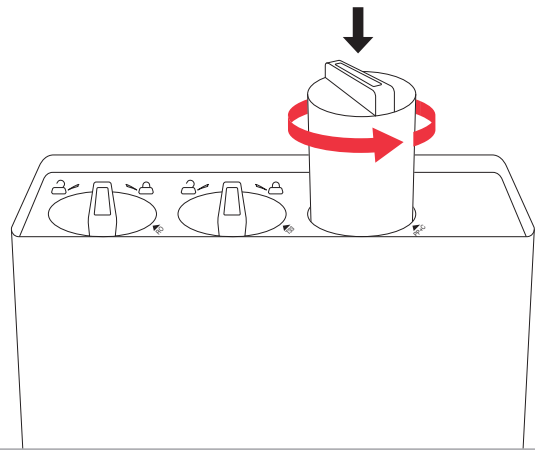


2

Pull the old filter out and dispose of in the trash. Insert the new filter, ensuring the arrow aligns with the "unlocked symbol" before turning it clockwise and securing the new filter into place.

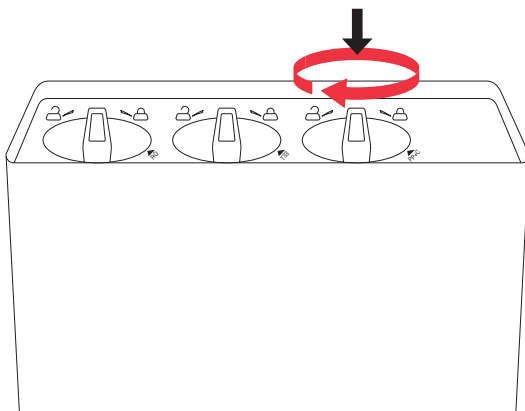

3

Repeat Step 1 for the Carbon Filter.

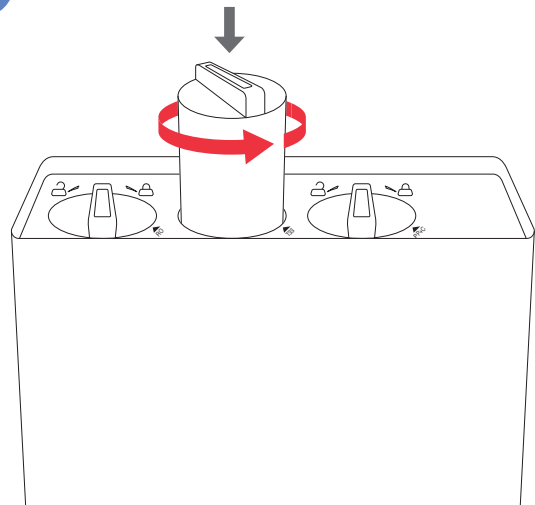


For more information please scan the QR code
or visit **enercare.ca/tanklessfilters**



enercare®
Experts at home™

Tankless Reverse Osmosis System Filter Replacement

-  #1 Pre-Filter (Black)
-  #2 Carbon Filter (Dark Grey)


THIS PACKAGE CONTAINS YOUR PRE-FILTER AND CARBON FILTER FOR YOUR TANKLESS REVERSE OSMOSIS SYSTEM. PLEASE FOLLOW THE STEPS BELOW TO REPLACE YOUR FILTERS.
(THE REVERSE OSMOSIS FILTER IS REPLACED EVERY 3 YEARS AND WILL ARRIVE AT A LATER DATE.)

Stage 3: Pressure Test, Purge, and Filter Reset

NOTE: After reassembling the Tankless Reverse Osmosis System, follow the steps below to perform a pressure test, purge and filter reset before use.


1

Open the main shut-off valve on the cold water supply line by turning it clockwise.

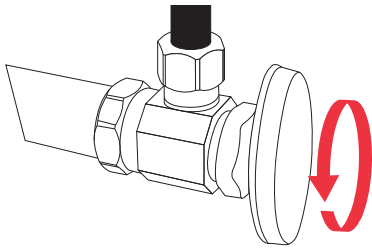

2


Let the water run out of the countertop faucet for 10-15 minutes from the Reverse Osmosis side (right tap) of the faucet and another 10-15 minutes from the purified side (left tap) of the faucet.

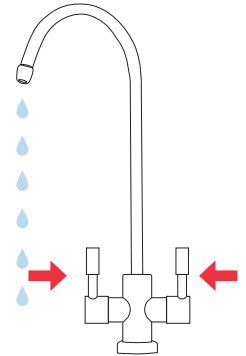

3

To reset the Pre-Filter:

- a) Press the "RESET" button for 3 seconds until you hear a beep then release.
- b) Use the "SELECT" button and select "PP+C" (for Pre-Filter)
- c) Finally, press and hold the "RESET" button again for 3 seconds to complete the process of resetting the filter on the unit.
- d) The system is now ready to use.

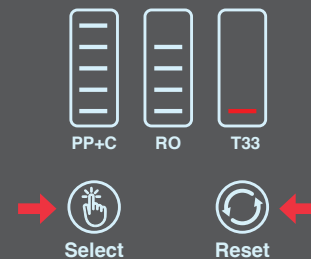

For more information please scan the QR code
or visit **enercare.ca/tanklessfilters**

PLEASE NOTE: You will be solely liable for any damage relating to such replacement, including the failure to follow the instructions and/or properly replace the filter/cartridge. If you require assistance, please contact Enercare to obtain a quote to complete such replacement for you.

™/©Enercare, Experts at home and the designs are trademarks of Enercare Inc., used under license.